
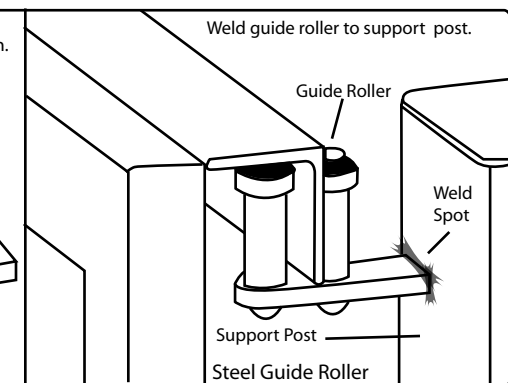
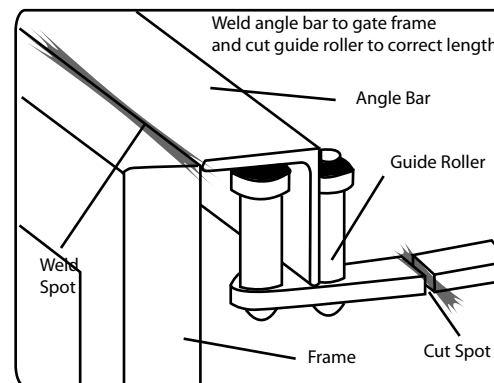
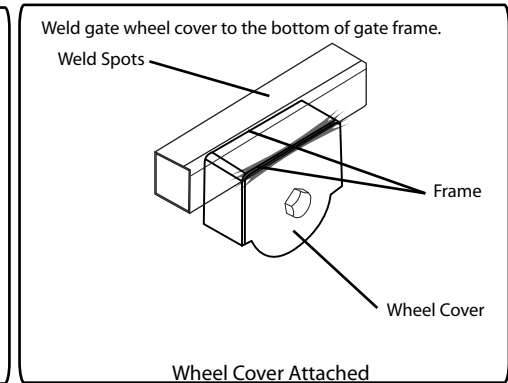
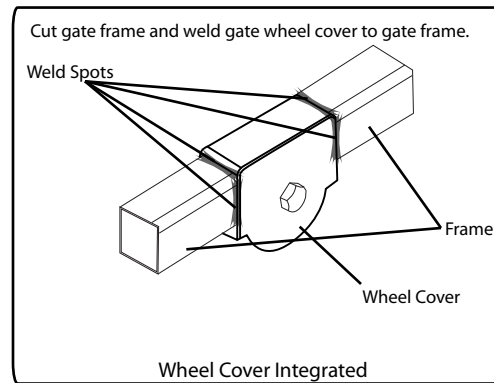
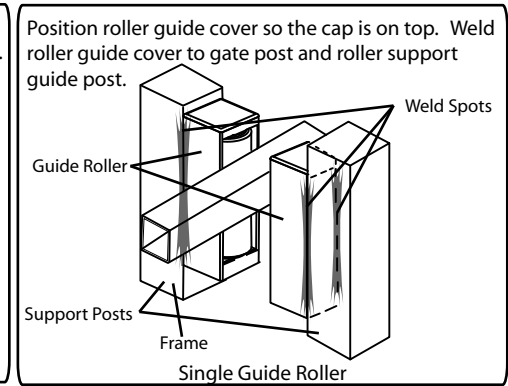
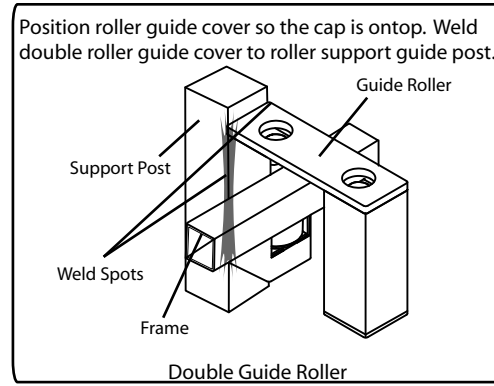
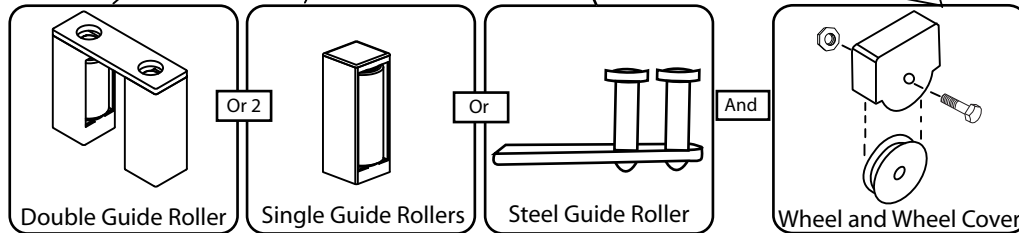


# Installation Instructions

## Guide Rollers and Gate Wheel and Wheel Covers for Slide Gate

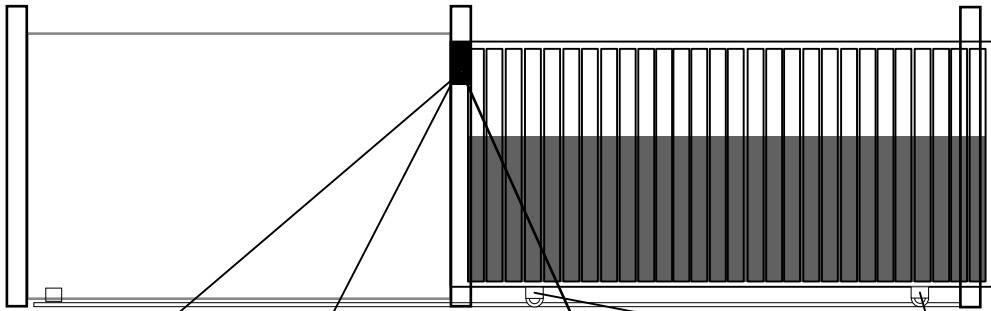

### Notice!

- ◆ Injuries occur when people get their hands or feet caught between the top of bottom of the gate and gate roller. These potential pinch-points should be guarded against at all times. Enclosed style gate tracks are available for refitting of these rollers from many fence suppliers.
- ◆ UL325 requires that contact sensors should be used and located at the leading edge, trailing edge and be post mounted to both inside and outside of a vehicular horizontal slide gate. Non-contact sensors such as photo eyes must protect during both open and close gate cycles.
- ◆ Injuries occur when people put their hands and arms through openings in the grill while the gate is operating. They cannot retract their arm and it gets caught between the moving gate grill and the stationary fence post or fence. This potential hazard can be averted by placing a 4' screen mesh on the gate to prevent access through openings anywhere the gate may travel. To prevent entrapment injuries, mount controls at least 6' from the gate or any moving parts of the gate.



4261 S. Country Club Tucson, AZ 85714-2009  
 1.520.881.3380 1.520.320.1820 (Fax)  
 E-mail: sales@guardiangatehardware.com  
 www.guardiangatehardware.com  
 © 2007 Guardian Gate Hardware